


User Guide

PS12V-AC-3A


- Read carefully this user guide before activating and using.
- Use this equipment only for an indoor adapted application.
- Mounting, maintenance and repair must be carried on by a skilled and authorized staff.
- The activation is easy, but a correct handling and an appropriate maintenance are mandatory to keep the power supply working perfectly.

Mounting

The Power Supply must be mounted firmly and securely.

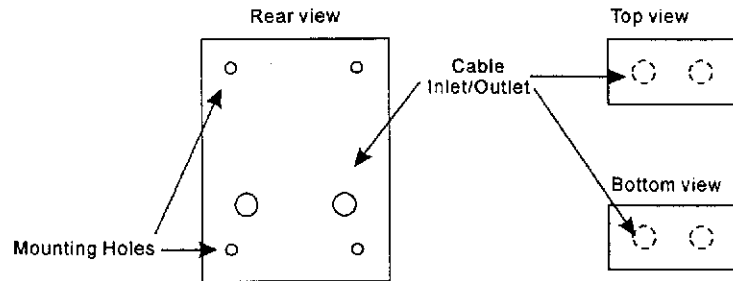

Terminal description

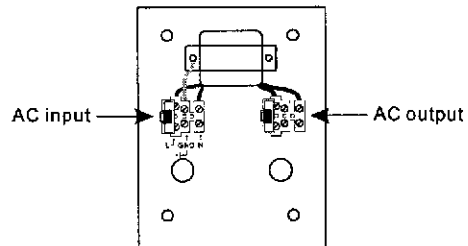

⚠ Make sure the power supply input voltage and the local grid voltage matching before using.

Main specification

- Supply voltage: 220V AC 50Hz
- Output voltage: 12V AC
- Max. Load current: 3A
- Glass fuse: input--1A output--5A

Caution

- Make sure the power supply input voltage and the local grid voltage matching before using.
- The UPS is to be installed in a controlled environment, make sure the power supply is well ventilated.
- It is mandatory to ground the power supply.
- Improper storage and installation environment may deteriorate insulation, shorten components life and cause malfunctions.

